

Thank you for purchasing an **Extreme Adventure Camera**. Have you ever wished you could relive a beautiful day mountain biking, the feeling of fresh powder or a warm day at the dunes? Have you ever wanted to share your racing experience with your friends? Now you can with your Extreme Adventure Camera. True crystal clear color video systems by Extreme Surveillance will let you capture the sights and sounds of your adventure. **Rewind the Adventure.**

Please read the manual thoroughly before use.

### **Camera Specifications:**

- Weatherproof CCD camera with 3.6mm lens
- Optional 6mm or 16mm lens
- SONY Super HAD CCD
- Color - 380 line resolution
- Hi Res Color – 480 line resolution
- Optional Ex-View – 0.1 Lux
- Video Output: 1.0Vp-p Composite
- Internal Synchronizing System
- Color Dimensions: 3” (L) x ¾” (Diameter)
- Automatic White Balance, Gain Control & Back Light Comp.
- 12VDC Power

### **System includes:**

- Color CCD Camera built into weatherproof metal housing
- Swivel Mount
- Head Band Mount
- 5’ RCA Video and Audio cables
- 2 Replacement Lens Covers
- AA Battery Pack with 3 Foot Lead
- Microphone
- Dual Lock Mounting Tape
- Carrying Case

### **Camera Set-up:**

- 1) The camera is the black cylinder shaped unit. Install or mount the Adventure Camera in the desired location. Make sure you have enough cable to reach the recorder or monitor you intend to use. When mounting the camera leave a small amount of slack in the cable to prevent the cable from pulling from the camera.
- 2) The camera can be mounted using the included swivel mounting bracket or head strap mount. The head strap mount can be cut to size and used as a Velcro mount with the dual lock mounting tape.
- 3) Connect the 4 PIN connector on the end of the camera cable to the 4 PIN connector on the wiring harness cable. This connector will only fit in one direction. Line up the notch on the connector to the corresponding notch opening. Do not force. Once connected, twist the black ring until snug. The yellow connector on the camera is for video, white connector on the microphone is for audio and black barrel connectors on the camera and microphone are for power. The two power connectors on the microphone allow you to power both the camera and microphone on one power supply.
- 4) The battery pack holds 8 AA batteries. The battery pack can be used with rechargeable or standard alkaline batteries. Ensure you place the batteries into the battery pack according to the diagram on the inside of the battery pack. It is very important you place the batteries in the correct direction. Connect the Battery Pack into the black power jack on the camera if not using the microphone. If using the microphone, the battery pack power connector connects into the barrel connector on the microphone. **\*IMPORTANT-** The battery pack will be in operation as long as the battery pack is connected to the camera. When not in use, disconnect the battery pack from the camera or remove the batteries.



Weatherproof Adventure Camera “AA” Battery Pack

Microphone

**You must have a recording device with video/audio INPUT capabilities.**



EXAMPLE: Sony Camcorder Input Jack

**How to connect your Extreme Adventure Camera to a recorder with RCA jacks:**

Turn the power to your recording device ON. Locate the VIDEO/AUDIO INPUT jack on your recording device. This will generally be an Yellow RCA jack for Video, White or Red RCA for Audio. Connect the Video/Audio Cables from the Adventure Camera into the VIDEO/AUDIO INPUT jacks on your recording device. Two adapter cables are included with your Adventure Camera if needed.

**How to connect your Extreme Adventure Camera to a recorder with a Mini Pin connector:**

If you have a Digital Recorder you may have a 3.5mm mini pin jack on your recording device. Turn the power to your recorder ON. Your recorder should come with an adapter cable that will have RCA jacks on one end and a mini pin connector on the other end. This will allow you to bring an analog signal into your recorder. Connect the end of the cable with RCA connectors to your Adventure Camera. Connect the end of the cable with the mini pin jack to the mini pin jack on your recording device.

**How to care for your Extreme Adventure Camera:**

- \*The Adventure Camera should be cleaned after every use. Use a soft, non-abrasive cloth to clean the camera and lens.
- \*Wipe down wiring with a dry cloth to remove debris.
- \*The Adventure Camera should be stored in the protective case when not in use.
- \*Always disconnect the battery pack or remove the batteries when not in use.
- \*Never pull on the wires from the adventure camera. Always handle your Adventure Camera by the camera, not the wiring.
- \*When mounting the camera leave a small amount of slack in the cable to prevent the cable from pulling from the camera.
- \*Do not aim your Adventure Camera directly into the light.
- \*The Adventure Camera is weatherproof not submersible. Do not submerge the camera into water.
- \*Do not touch the lens with your finger.

**Safety Precautions**

- \*Only use with the power supplies provided with the system.
- \*Do not expose the power supplies to moisture.
- \*Do not modify the system. Refer to qualified personnel only.

If you have any questions regarding the setup of this unit please contact Extreme Surveillance at 800-788-7101 or [support@adventurecameras.com](mailto:support@adventurecameras.com).

For service on an Adventure Camera please contact Extreme Surveillance at 800-788-7101 or [service@adventurecameras.com](mailto:service@adventurecameras.com).

**Our Showroom and Mailing Address:**

**Extreme Surveillance**  
**7701 East Gray Road**  
**Suite 5**  
**Scottsdale, AZ 85260**

**Corporate Office: 480-892-1119**  
**Customer Service: 800-788-4904**  
**Technical Support: 800-788-7101**  
**Web Site: [www.adventurecameras.com](http://www.adventurecameras.com)**

### Optional Accessories for your Extreme Adventure Camera:

- ▲ Head Strap Mount
- ▲ Cross Channel Mount
- ▲ Velcro Mount
- ▲ Parallel Mount
- ▲ High Gain Microphone
- ▲ Battery Pack
- ▲ Rechargeable Batteries
- ▲ 12V Power Adapter
- ▲ Car Power Adapter
- ▲ Power Extension Cable
- ▲ Video/Audio/Power Cable
- ▲ Replacement Lens Glass
- ▲ Dual Lock Mounting Tape

### *Limited Warranty*

This product is warranted to be free from defects in material and workmanship, given normal use and care for one year. We will repair or replace, at our discretion, any product or part which fails as a result of such a defect during the warranty period. Defects caused by misuse, abuse, negligence, accidents, modifications and unauthorized repairs are not covered by this warranty. There are no warranties which extend beyond the description herein, either to the merchantability or fitness for a particular purpose.

The purchaser's dated invoice must be retained as evidence of the date of purchase and to establish eligibility. **Do not tamper with or remove serial number. This will void your warranty.**

The product to be repaired is to be returned in either the original carton or similar package which will provide an equal degree of protection. All freight cost associated with the replacement or repair of products are the responsibility of the purchaser. The manufacturer is not obligated to provide purchaser with a substitute unit during the warranty period or at any time.

All claims for warranty service must be made within the warranty period. No repair or replacement of any product or part thereof shall extend the warranty period as to the entire product. The specific warranty on the repaired part only shall be in effect for a period of ninety (90) days following the repair or replacement of that part or the remaining period of the product parts warranty, whichever is greater. If purchaser believes that the product is defective in material or workmanship, then written notice with an explanation of the claim shall be given promptly by the purchaser to the manufacturer.

It is the responsibility of the purchaser to determine and comply with all federal, state and local laws and regulations in regard to the purchase, possession and use of all products offered.

#### **Copyright ©**

All materials published including, but not limited to, images, illustrations, text articles and drawings, are owned by Omni Business Solutions LLC, DBA Extreme Surveillance and are protected by US copyright law (title 17, US Code). Users may not create derivative works from, modify, publish, transmit, transfer, sell, reproduce or distribute content without written consent of Omni Business Solutions LLC.